



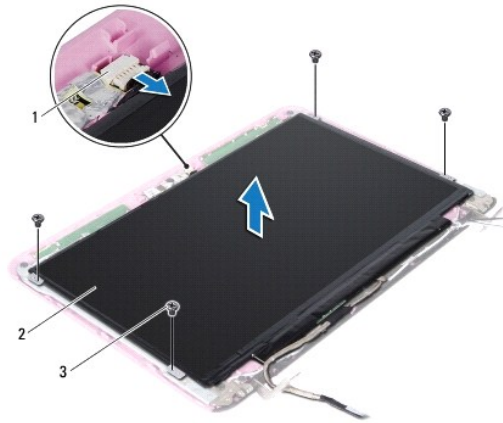

1	camera cable connector	2	display panel
3	screws (4)		

- Lift the display panel off the display back cover.
- Turn the display panel over and place it on a clean surface.
- Peel the tape covering the display cable and lift the display cable off the back of the display panel.
- Lift the tape that secures the display cable to the display cable connector and disconnect the display cable.

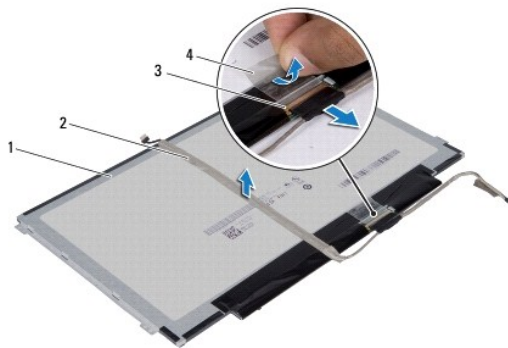

1	back of the display panel	2	display cable
3	display cable connector	4	tape

Replacing the Display Panel

- Follow the instructions in [Before You Begin](#).
- Connect the display cable to the display cable connector and secure it with the tape.
- Place the display cable on the back of the display panel and secure it with the tape.
- Turn the display panel over and place it on the display back cover.
- Connect the camera cable to the connector on the camera module.
- Replace the four screws that secure the display panel to the display back cover.